

## **OPTICAL TABLE SUPPORTS 1TS**

convenient sizes
optimal height
multipurpose in use
handy assembling





Optical Table Supports 1TS are primarily designed for the Honeycomb Table Tops 1HT. Table Supports are produced from steel tubes of 100mm and 80mm square section, in decorative black coating. 1TS is composed of two "P" type supports, bound by a cross-beam.

Optical Table Supports 1TS ideally suit other types of optical plates and other equipment, as well. This is possible because

plates are not fastened – they are just laid on top of the supports.

On request we produce table supports of any size, design, and of greater sturdiness.

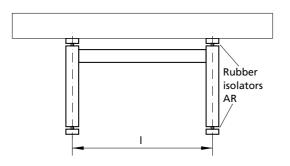

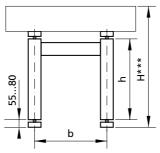


THE 1TS TABLE SUPPORTS IN STOCK

Model	b,	l,	h,	H***,	Weight,	Best for these tabletops
	(mm)	(mm)	(mm)	(mm)	(kg)	
1TS05-07-05 1TS05-07-06	500	700	500 600	810860 910960	48	1HB06-08-07; 1HT08-10-20; 1HT09-14-12
1TS05-12-05 1TS05-12-06	500	1200	500 600	810860 910960	53	1HT08-20-20
1TS065-12-05 1TS065-12-06	650	1200	500 600	810860 910960	55	1HT10-20-20; 1HT12-24-20
1TS08-12-05 1TS08-12-06	800	1200	500 600	810860 910960	58	1HT15-24-20
1TS065-18-05 1TS065-18-06	650	1800	500 600	810860 910960	64	1HT12-30-20; 1HT12-35-20


<sup>\*\*\*</sup>The heights are measured with table tops 200mm thick and with rubber leveling elements AR

By default we supply rubber leveling elements AR. For other types, please specify them when ordering. E.g. 1TS05-12-06-AS means table support 500 mm wide, 1200 mm long and 600 mm high with 8 leveling elements AS.

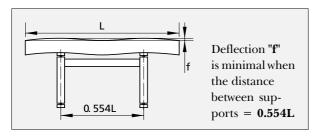


If required, e.g. when used with a laser shelf **1LS51**, the table support may be assembled upside-down. This doesn't degrade its performance.


Table supports may be supplied with various leveling and vibration-isolation systems. This allows to meet various needs of our customers.

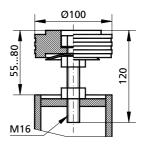

**Rubber leveling element (AR)** ensures sufficient vibration isolation. 8 pieces required.

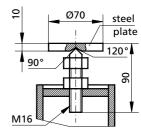

**Solid leveling element (AS)** is used, when no damping is needed. 8 pieces required.

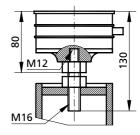

Passive air leveling vibration isolator (AP). 4 pieces of passive air isolators AP are placed on the top side of 1TS, and 4 pieces of AR or AS are placed on the floor. There are different models of AP with different load capacities.

